

Requirements for attending site to work on a Ciqurix CORE system:

- **Laptop**

- Relevant version Ciqurix DC software installed\*
- AngryIP or other equivalent network scanning tool installed
- RJ45 network port (or a usb to RJ45 adaptor)
- RJ45 network patch lead

If the Ciqurix system is not internet-connected:

- Wifi connection from laptop to internet (via site wifi or 4G/5G dongle or tether)

- **Physical access to the Ciqurix Control Hub**

- **Physical access to all Ciqurix Cameras**

- cherry picker / ladder / scaffold etc
- confirmation from the site that safe access will be available as required

- **Physical access to any Ciqurix Network Extenders, Extension Hubs etc**

- **Tools**

- Triangular "utility" cabinet key
- Excel rack key (for rack mounted hubs only)
- 2.5mm allen key (an actual allen key or hex spinner, not a screwdriver bit)
- 4mm allen key or hex bit
- 6mm allen key or hex bit
- Krone punchdown tool
- Low voltage DC multimeter (able to read 24Vdc and resistances)
- Standard electrical hand tools (eg 3.5mm screwdriver etc)

\*If you do not have the Ciqurix DC software on your laptop, contact us in advance BEFORE attending the site so we can organise installing this. Laptop requirements:

- Windows 10 or 11
- Administrator rights
- Permission to install software
- Teamviewer installed